



Purpose: Block access to internal/external audio speaker switch.

- 1. Turn TV on and set the "hidden" audio speaker switch to either internal or external as desired.
- 2. Glue the large rectangle to position #1, to cover rect. hole
- 3. Glue "T" piece to position #2, as shown by dashed outline.
- 4. Rotate small rectangle as shown and glue to position #3. (This piece should fit tightly into the slot.)