

SCOPE:

To install a PDi ELED television onto an existing PD168-103 mount using the PD181-677 adapter plate. **NOTE:** This may also fit other manufacturer's 100mm x 100 mm VESA brackets. Mounts other than the PD168-103, may require using the M4 x 10 screws with the #10 flat washers for proper attachment.

TOOL LIST:

- 1. P1 or P2, Phillips screw driver
- 2. Safety glasses/goggles
- 3. Level

SAFETY STEPS:

- 1. Always wear safety glasses/goggles to prevent injury from debris.
- 2. Follow the installation/removal instructions for your existing products.


PARTS LIST

QTY	PART NUMBER	DESCRIPTION
1	PD181-677	100 x 200 ADAPTER PLATE
4	PDIITLW10	#10 Internal Tooth Lock Washer
4	PDIPPHMSM5X810	M5 x .8 x 10mm Long Phillips Head Screw
4	PDIPPHMSM6X110	M6 x 1 x 10mm Long Phillips Head Screw
4	PDIPPHMSM4X76	M4 x .7 x 6mm Long Phillips Head Screw
4	PDIPPHMSM6X18	M6 x 1 x 8mm Long Phillips Head Screw
4	PDIPPHMSM4X710	M4 x .7 x 10mm Long Phillips Head Screw
4	PDIFW10	#10 Flat Washer


The PDIFW10 AND PDIPPHMSM4710 washers and screws are included to be used if this adapter plate is being paired with a thicker wall mount.

PROCEDURE:

 Secure wall bracket PD181-596 (not included) to PD181-677 adapter plate using (4) PDIPPHMSM4X76 screws and (4) PDIITLW10 internal tooth lock washers as shown. (Fig. 1)

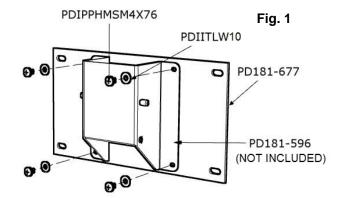


 Secure the PD181-677 adapter plate to TV using (4) PDIPPHMSM5X810 screws for 29" TV or (4) PDIPPHMSM6X110 screws for 32" plastic TV or PDIPPHMSM6X18 screws for 32" metal TV. (Fig. 2)

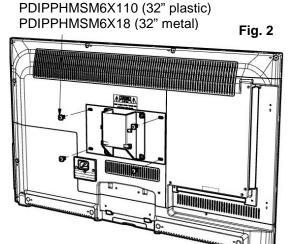

PDIPPHMSM5X810 (29")



3. Mate the PD181-596 mounting bracket on TV to PD181-697 bracket on wall (both parts from PD168-103 mount) using (2) PDIPPBHSCS103250 pilfer proof button head socket screws. Make sure the pivot bolts are retained in the "L" shaped slot (Fig. 3)

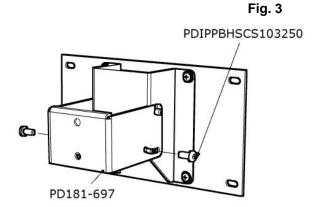

4. The TV's tilt can be adjusted by loosening both Pilfer Screws, adjusting tilting, and then tightening the (2) PDIPPBHSCS103250 pilfer proof head socket screws.

