

**SCOPE:** TO INSTALL A CV3200 TV TO A PD133-938 TABLE STAND.

## **TOOL LIST:**

- SAFETY GLASSES/GOGGLES
- 2. PHILLIPS SCREWDRIVER

# **SAFETY STEPS:**

- 1. ALWAYS WEAR SAFETY GLASSES/GOGGLES TO PREVENT INJURY FROM DEBRIS.
- 2. FOLLOW THE INSTALLATION/REMOVAL INSTRUCTIONS FOR YOUR EXISTING PRODUCTS.

### **PARTS LIST:**

| ITEM | PART NUMBER    | DESCRIPTION       | QTY |
|------|----------------|-------------------|-----|
| 1    | CV3200         | TV (NOT INCLUDED) | 1   |
| 2    | PD133-938      | TABLE STAND       | 1   |
| 3    | PDIFW10        | #10 FLAT WASHER   | 7   |
| 4    | PDIPPHMSM4X716 | M4 PHILLIPS SCREW | 7   |

#### PROCEDURE:

### STEP 1:

PLACE TV (1) FACE DOWN ON FLAT SURFACE.


# STEP 2:

PLACE PD133-938 TABLE STAND BRACKET (2) ONTO BACK SIDE

\*CONFIRM FOUR ROUND ANTI-SKID BUMPERS ARE ON BOTTOM OF STAND





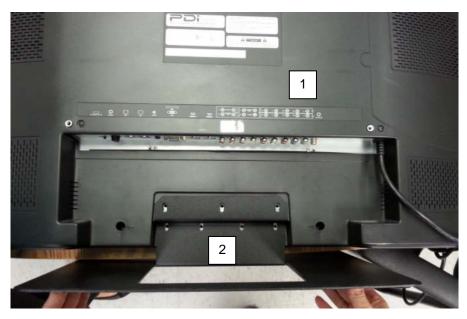



| MODEL NUMBER. |                |        |
|---------------|----------------|--------|
| PD133-938 T   | able Stand for | CV3200 |

Document Number: PD196-300R1

Installation Instructions

Page 2 of 2

STEP 3: PLACE ONE PDIFW10 FLAT WASHER (3) AND ONE PDIPPHMSM4X716 SCREW (4) ONTO EACH OF THE SEVEN MOUNTING HOLES.

\*DO NOT FULLY TIGHTEN UNTIL ALL SCREWS AND WASHERS ARE IN PLACE.



# FINISHED ASSEMBLY

