

	MODEL NUMBER: PD168-085	Document Number: PD196-260R3
	Adapter Kit Installation Instructions	Page 1 of 2

SCOPE:

To install a PDi television onto an existing PD168-103 mount using the PD168-085 adapter kit.

TOOL LIST:

1. P1 or P2, Phillips screwdriver
2. Safety glasses/goggles
3. Level

SAFETY STEPS:


1. Always wear safety glasses/goggles to prevent injury from debris.
2. Follow the installation/removal instructions for your existing products.

BILL OF MATERIAL:


ITEM	PART NUMBER	DESCRIPTION	QTY
1	PD181-677	100 x 200 ADAPTER PLATE	1
2	PDIPPHMSM4X76	M4 x .7 x 6mm Long Phillips Head Screw	4
3	PDIITLW10	#10 Internal Tooth Lock Washer	4
4	PDIPPHMSM5X810	M5 x .8 x 10mm Long Phillips Head Screw	4
5	PDIPPHMSM6X110	M6 x 1 x 10mm Long Phillips Head Screw	4
6	PDIPPHMSM6X18	M6 x 1 x 8mm Long Phillips Head Screw	4

PROCEDURE:


1. Secure the **PD181-596** bracket (not included) to the **PD181-677** adapter plate (#1) using four (4) **PDIPPHMSM4X76** screws (#2) and four (4) **PDIITLW10** washers (#3) as shown.

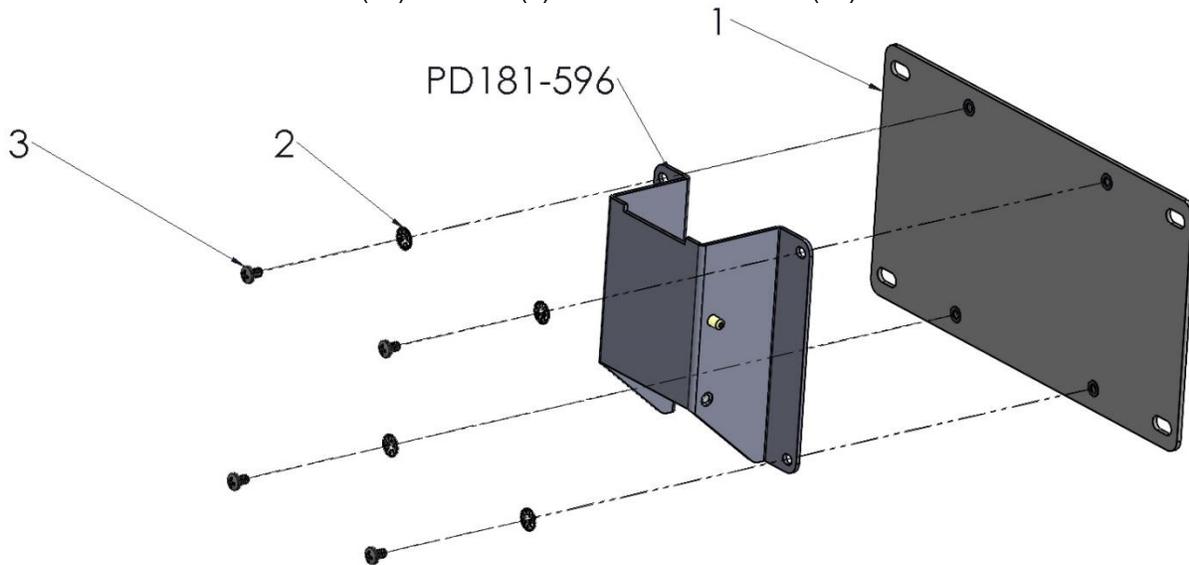

2. Secure the **PD181-677** adapter plate (#1) to the PDi TV (not included) using four (4) **PDIPPHMSM5X810** screws for a PDi 29" TV or four (4) **PDIPPHMSM6X110** (#5) screws for a PDi 32" plastic TV or four (4) **PDIPPHMSM6X18** screws (#6) for a **PDI-A32** TV, as shown.

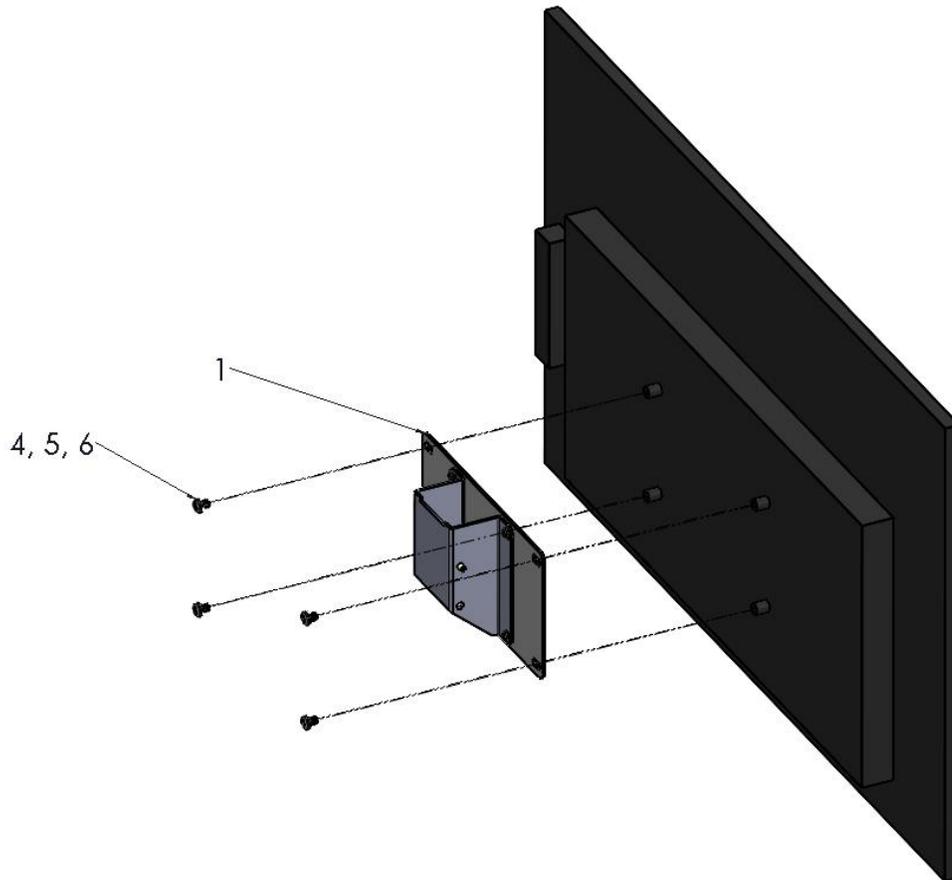

3. Connect the **PD181-596** wall bracket (not included) to the **PD181-697** wall bracket (not included) (both parts from PD168-103 mount) using the two (2) **PDIPPBHSCS103250** screws and two (2) **PDIITLW10** washers. Ensure the pivot bolts are retained in the "L" shaped slot as shown.

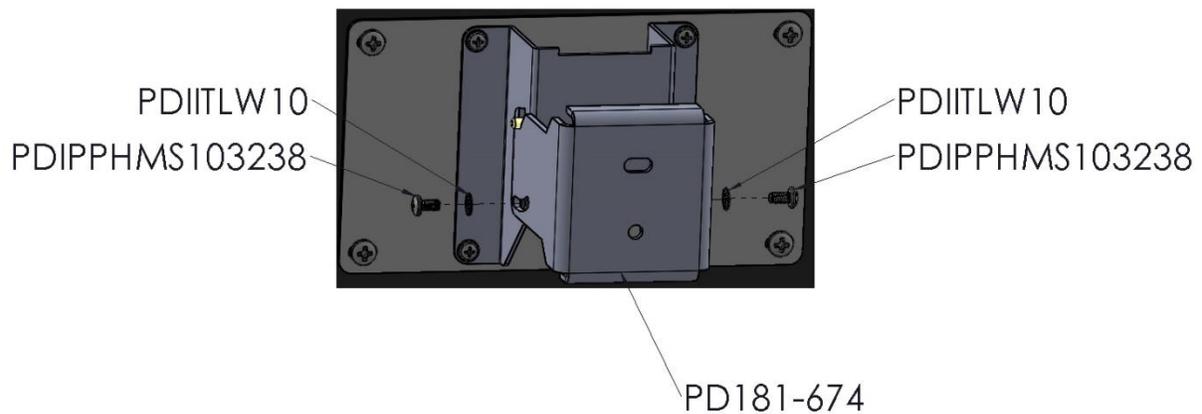

4. The TV's tilt can be adjusted by loosening both Pilfer Screws, adjusting tilting, and then tightening the (2) **PDIPPBHSCS103250** pilfer proof head socket screws.