



PD295-004
BELLA-HD™ Set Top Box
Interface Module





MODEL: PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 2 of 27

Contents

CAUTIONS AND WARNINGS	3
IMPORTANT SAFETY INSTRUCTIONS	4
Introduction	5
Compatibility	5
Mounting and Powering the Interface Module	5
Connections	6
Wall Mounted Televisions	6
Wall Mounted TV – Data, Power, and IR Emitter Cable Installation	6
Wall Mounted TV - RF Cable Installation	8
Arm Mounted Televisions	8
Arm Mounted TV – Data, Power, and IR Emitter Cable Installation	8
Arm Mounted TV - RF Cable Installation	9
TV Setup – Most PDi TVs	12
TV Setup – A-Series	13
TV Setup – medTAB	13
Verifying and Troubleshooting Connections	13
Power	14
STB Link	14
TV COM	14
IINK	11

HDMI14
Interface Module Setup Menus15
Accessing Interface Module Setup Menus on most PDi TVs 15
Accessing Interface Module Setup Menus on medTAB-C15
Menus 1 ~ 516
Menu 617
Programming the Interface Module17
Programming the IR Code Set17
Keypad Programming (Mapping) Instructions18
Programming for Off-Air Non-Satellite Channels Using Off-Air RF Pass-Thru19
An Example for Off-Air RF Pass-Thru19
Programming the STB Signal Input Type20
Restoring Factory Default Settings20
Operation20
Cable/Satellite TV Operation20
Off-Air TV Operation (Optional)21
Troubleshooting21
Appendix A - Control Device (TV) Key Reference23
Appendix B - STB Command Reference24
Appendix C - Factory Defaults25
Limited Warranty27









Document Number: PD196-426R2

User Manual

Page 3 of 27



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

CAUTIONS AND WARNINGS

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



WARNING: To prevent injury, this apparatus must be securely attached to the equipment rack in accordance with the installation instructions.



WARNING: Do not install this equipment in a confined space such as a bookcase or similar unit.



Modifications

Any changes or modifications made to this device that are not expressly approved by PDi may void the user's

authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Safety Instructions

To avoid any malfunctions of the unit and associated components and unwanted electric shock or fire accidents, please observe the following:

- Review the manual for your STB unit for safety instructions
- Review the manual for your PDI TV for safety instructions
- Review the manual for the rack unit.

Placement

Avoid placing the unit in surroundings with:

- High temperature (over 40 C) or high humidity (over 90%).
- Direct sunlight or heat sources, like radiators or ovens.
- Excessive dust.
- · Electrostatic effect.
- Vibration, impact, or tilted surface.

Wet Areas

- Avoid rain and moisture.
- DO NOT set containers with liquid, such as vases, on top of the unit.
- Avoid placing the unit in areas where there is dripping and/or splashing.
- Avoid placing unit near standing water.

Oxygen Environment

 DO NOT use in an oxygen tent or an oxygen chamber. Such use may cause a fire hazard.



CAUTION

ISK OF ELECTRIC SHOCK, DO NOT OPEN!



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

SERVICING

User Servicing

If your product is not operating correctly or exhibits a marked change in performance and you are unable to restore normal operation by following the detailed procedure in its operating instructions, do not attempt to service it yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service

Unplug this product and refer servicing to qualified service personnel under the following conditions:

- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance which indicates a need for service.

Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating conditions.

Cleaning & Disinfecting

- Unplug before cleaning.
- Use a soft cloth to clean.
- Do not use harsh chemicals such as solvents.

COPYRIGHT, DISCLAIMER, TRADEMARKS Copyright

PDi Communication Systems, Inc. claims proprietary right to the material disclosed in this manual. This manual is issued in confidence for installation and operational information only and may not be used to manufacture anything shown herein. Copyright by PDi Communication System, Inc. All rights reserved.

Disclaimer

The author and publisher have used their best efforts in preparing this manual. PDi Communication Systems, Inc. makes no representation or warranties with respect to the accuracy or completeness of the contents of this manual and specifically disclaim any implied warranties of merchantability or fitness for any











Document Number: PDi BELLA-HD Interface PD196-426R2

User Manual

Page 4 of 27

particular purpose and shall in no event be liable for any loss of profit or any other damages, including but not limited to special, incidental, consequential or other damages for the use of this manual. The information contained herein is believed accurate, but is not warranted, and is subject to change without notice or obligation.

MODEL:

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or groundingtype plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel.


Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has

Trademarks

All brand names and product names used in this manual are trademarks, registered trademarks, or trade names of their respective holders. PDi and Better Solutions Are Within Reach are registered trademarks of PDi Communication Systems, Inc

been exposed to rain or moisture, does not operate normally, or has been dropped.

- 15. This appliance should be mounted in an equipment rack as recommended by the manufacturer.
- 16. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 17. If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounding so as to provide some protection against voltage surges and builtup static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.

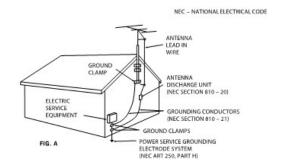

NOTE: This reminder is provided to call the CATV system installer's attention to article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.









PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 5 of 27

Introduction

Traditionally a facility pays for dozens or hundreds of cable/satellite channels but only has a small number of set-top-boxes, each locked on a single channel, and combined onto the cable plant. When a patient wants to view a channel that isn't on the cable plant, the nurse must go to the head end and change one of the receivers or tell the patient the channel is not available. To provide the full channel package to each patient, the set-top-box may be placed next to each TV in the patient area. Unfortunately, when the IR remote is used by one patient to change channels, any TV nearby will also change.

The PDi Interface Module is designed to improve the patient experience interacting with a TV at a facility in which the channels come from a cable/satellite set-top-box. It allows direct access to all set-top-box functions via PDi TV keypad, IR remote, and pillow speaker. It gives patients access to every channel the facility is paying for and allows patients to easily switch between cable/satellite, in-house DVD, and rooftop antenna channels. The interface module can pay for itself by eliminating modulators, splitters, and combiners in most environments. It removes the need to modulate signals for distribution by sending HDMI from each set-top-box directly to an associated TV. It offers customizable key mapping and works in many retrofit installations. Best of all it's made in America!

Compatibility

The PDi interface module uses HDBase-T technology to bring uncompressed HDMI signals from the set top box at the head-end to the TV. It also forms a communication bridge between the PDi TV and set top box.

As of this print, the following set-top-boxes have been tested to work with the PDi interface module. Contact PDi for compatibility with other models.

Provider	Set Top Box Model	PDi Interface Module Min Firmware Version
Cablevision	Scientific Atlanta Explorer 4250HD	V5.00
Charter/Spectrum	Motorola DCH6200	V5.00
Charter/Spectrum	Motorola DCT2224	V5.00
Comcast/Xfiniti	Pace DC50X	V5.00
Comcast/Xfiniti	Pace PXD01ANI	V5.00
Comcast/Xfiniti	Comcast PR150B	V5.00
Comcast/Xfiniti	Comcast RNG110	V5.00
COX	COX 3250HD (Scientific Atlanta Explorer 3250HD)	V5.00
COX	COX DTA250HD	V5.00
DirecTV	DirecTV H25	V5.00
Dish	Dish ViP211k	V5.00
Dish	Dish ViP222k	V5.00
Haivision	Haivision Stingray	V5.00
Haivision	Haivision Mantaray	V5.00
Time Warner Cable/Spectrum	Cisco DTA 271HD	V5.00
Time Warner Cable/Spectrum	Cisco 8742 HDC	V5.00
Time Warner Cable/Spectrum	Spectrum101-T	V5.00
Verizon		V5.00

Mounting and Powering the Interface Module

The PDi interface module is designed to slide into an industry standard mini-mod chassis and is powered by the chassis' power supply. Standard mini-mod rack mount chassis with power supply are suitable for the interface module. These include, but are not limited to:











Document Number: PD196-426R2

User Manual

Page 6 of 27

ATX / Pico Digital MPC-12 Blonder Tongue MIRC-12V with MIPS-12C Drake® RMM-12 with PSM121 Holland HMR with HMPS

MODEL:

When it is more desirable to have the set-top-box and interface module located near the TV, the module may be used in a stand-alone configuration without the need for a mini-mod chassis. In this case the PDi PD106-747 power adapter (not included) should be used to power the interface module. Since the interface module uses very little energy, it has no special ventilation requirements. A DirectTV set-top-box can power the mini-mod in place of the rack mount chassis power supply.

Connections

The PD295-004 BELLA interface module connects to the TV via standard CAT6a cable. CAT6a provides a higher bandwidth needed for the HDMI video signal and the length should not exceed 250 feet. BELLA must be powered via the rack mounted chassis, a standalone power adapter, or via a USB power connection. The IR Emitter cable must also be connected to the module and adhered to the IR window of the corresponding set-top-box. CAT6a, HDMI and power cables are not provided with the Bella.

Wall Mounted Televisions

Wall Mounted TV - Data, Power, and IR Emitter Cable Installation

- 1. Connect 26 pin connector of cable PD106-981 to the TV's 26 pin connector and the other end to the CCI connector on the BELLA CCI port as shown below.
- Connect an HMDI cable between the BELLA interface box and the TV.
- 3. Connect the CAT6a cable to the RJ45 port on the PD295-004 interface module.
- 4. Remove adhesive backer from the module and secure it to the rear of the TV.
- 5. For rack mounted interface module, connect rack minimod power cable to PD295-004. For stand-alone mounting, connect power cord PD106-747 to PD295-004.










PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 7 of 27

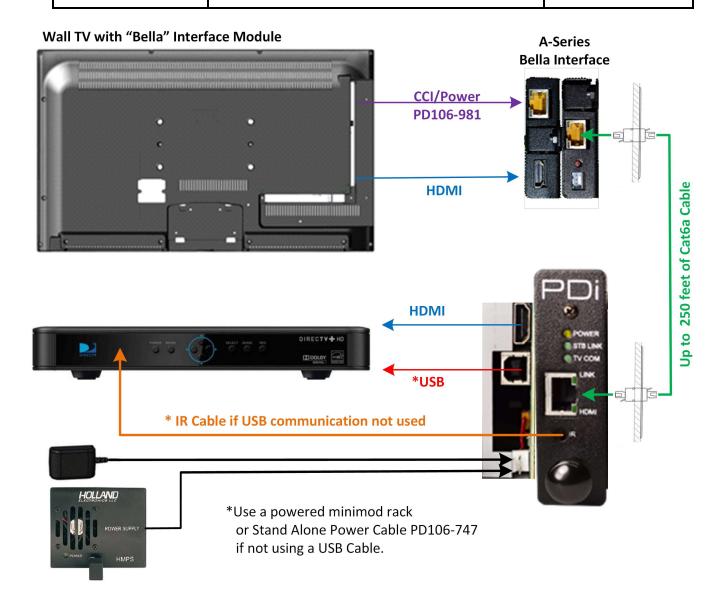





PDi Communication Systems, Inc. • 40 Greenwood Ln • Springboro, Ohio 45066 USA • www.PDiarm.com and www.mymedTV.com • Phone 800.628.9870





Document Number: PD196-426R2

User Manual

Page 8 of 27

Wall Mounted TV - RF Cable Installation

MODEL:

The RF Output Signal cable from each set-top-box (STB) must also be routed to each remotely located television. Please refer to the STB installation instructions for details.



Arm Mounted Televisions

The PD295-004 interface module is also compatible with several of the PDi Arm Mounted televisions that incorporate a BELLA interface. Models such as the medTV and medTAB can be used successfully with the interface module when ordered with the BELLA option.



NOTE: Each TV and its Support Arm must be pre-wired with a CAT6a data cable. Please contact PDi Communication Systems or your PDi distributor for assistance should your TV and/or Arm lack this cable.

Arm Mounted TV - Data, Power, and IR Emitter Cable Installation

The CAT6a cable used to connect the remotely located TV to the interface module should not exceed 250 feet in length. CAT6a, HDMI and power cables are not provided with the interface module.

- 1. Connect one end of the CAT6a cable to the Data Cable from the Arm/TV. The in-room Data Connection is typically wall mounted as illustrated below.
- 2. Connect the other end of the CAT6a cable to the RJ45 port on the front of the PD295-004 interface module.
- 3. If using a DirecTV set top box, connect the USB cable to the PD295-004. No other power supply is needed.
- 4. Connect the IR Emitter cable to the interface module if used (see note below).
- 5. Remove adhesive backer from IR Emitter and secure it to the IR receiver window of the STB.
- 6. For a chassis mounted interface module, connect chassis power cable to PD295-004. For stand-alone mounting, connect power cord PD106-747 to PD295-004.









User Manual

Page 9 of 27

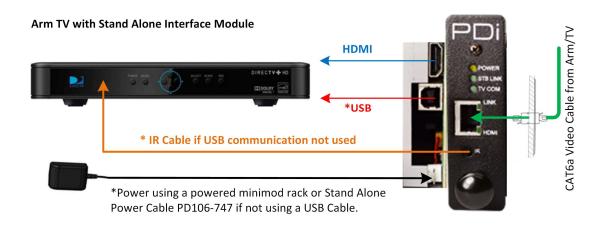

MODEL:

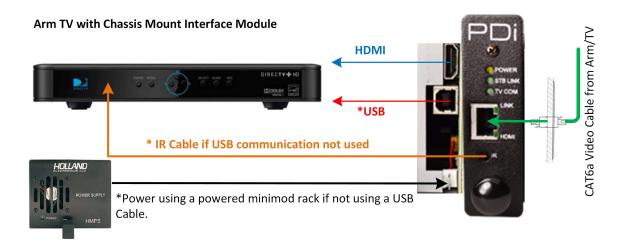

Arm Mounted TV - RF Cable Installation

Unlike AC powered wall mounted TV's, PDi arm mounted television models receive their RF signal and TV power combined along a connecting coax cable from an external power source. Special consideration must be used in handling the low voltage AC power found on the RF signal coax cable.

Two types of external power supplies are used with arm mounted televisions: individual or central style. The individual power supply mounts near the TV injecting power from a nearby AC outlet onto the incoming coaxial cable. The central supply injects power onto 10 separate coax cables simultaneously and mounts in a wiring closet as far as 150 feet away from the TV's. Connection of the RF signal coax cable for each style of power supply is detailed below.

Individual Style Power Supply - RF Cable Installation

Signal connections for an arm mounted TV powered from an individual power supply requires a single coax cable no longer than 300 feet, connected at the set-top-box's "Output to TV" connection.

Some set-top-boxes also allow for the connection of an external Antenna or other signal source via an "OFF-AIR IN" connection. Please consult your set-top-box installation instructions for details.










Document Number: PD196-426R2

User Manual

Page 10 of 27



NOTE: The drawing below is representative of the typical set-top-box. Your box may vary in appearance.

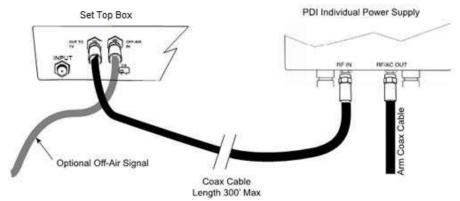

Central Style PDI -772HE Power Supply - RF Cable Installation


MODEL:

Low voltage AC TV power is present on each central power supply TV coax cable. A PDi Power Passer (part number PD167-003) is required to route the AC power on the coax cable around any externally connected device such as the Satellite Box. A Power Passer is required for each TV/STB connection. For new installations, the use of a PDI-772HE-IND instead of PDI-772-HE will eliminate the need for the power passers.



NOTE: The PD167-003 Power Passer is an optional device NOT supplied with the interface module and is only required for centrally powered arm mounted televisions. Please contact PDi or your PDi distributor to order this device.

- Remove power from the TV at the central power supply.
- Connect a coaxial cable from the STB "OUT TO 2. TV" to the Power Passer's "RF IN FROM EXTERNAL DEVICE".
- Locate the coaxial cable from the central power supply. Connect this cable to "FROM POWER SUPPLY".
- Connect the coaxial cable from the TV to "COMBINED SIGNAL TO TV." The TV coax should be limited to 150' to accommodate the central power supply coax length limitations.
- Connect an Optional Secondary RF signal coaxial cable from the Power Passer's "RF OUT TO EXTERNAL DEVICE" to the set-top-box "OFF-AIR IN". This connection is only necessary if you wish to view TV signals that are already present on your system in addition to set-top-box signals.

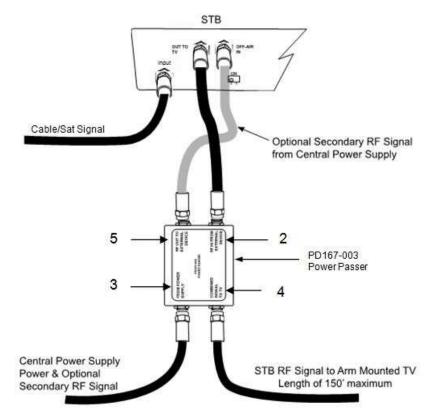







Document Number: PD196-426R2

User Manual


Page 11 of 27

Central Style PDI-772HE-IND Power Supply - RF Cable Installation

MODEL:

Low voltage AC TV power is present on each central power supply TV RF out port. Each RF In port is designed to be connected to a separate RF source with minimal loss and high isolation.

- Remove power from the TV at the central power supply.
- Connect a coaxial cable from the set-top-box "OUT TO TV" to one of the 10 "RF IN" ports on the PDI-772HE-IND.
- Connect the coaxial cable from the TV to "RF OUT". The TV coax should be limited to 150' to accommodate the central power supply coax length limitations.
- Connect an Optional Secondary RF signal coaxial cable to the set-top-box "OFF-AIR IN". This connection is only necessary if you wish to view TV signals that are already present on your system in addition to set-top-box signals. Signal strength entering the set-top-box should be +3dBmV to +10dBmV.

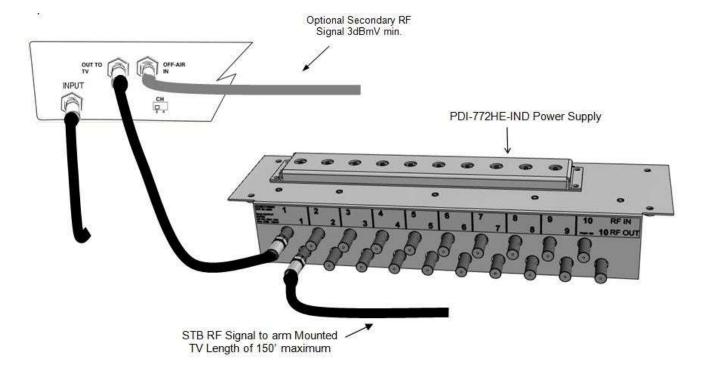









Document Number: PD196-426R2

User Manual

Page 12 of 27


TV Setup - Most PDi TVs

To establish communications to the interface module, the CCI port on the TV must be active and you must have a PDi programming remote PD108-420 (not included). Follow the steps below:

MODEL:

- 1. Press SETUP to enter the TV's setup menu.
- 2. From the setup menu select "Features".
- 3. If the "Standby Power" setting shows in this menu, change it to "Normal". Some TV's do not have this setting so this step can be ignored. Other TV's may operate the interface module on any "Standby Power" setting. This can be determined by trying it or contacting PDi.
- 4. From the initial setup menu, select "Channels".
- 5. Change the "Pro:idiom" option to "MTI Port" or "Data Port". Some TV's do not have this setting. In that case, this step can be ignored.
- 6. From the initial setup menu, select "Sources". Set each item as detailed below.

The TV Source Setup must properly reflect the actual connections to the TV. Incorrect settings will result in loss of programming or the addition of blank signal sources. In most installations, both cable/satellite and off-air programming is delivered over RF so the "TV Tuner" must be enabled. If the cable/satellite channels are delivered over an alternate method such as HDMI, then that source must be enabled. All unused sources should be disabled.

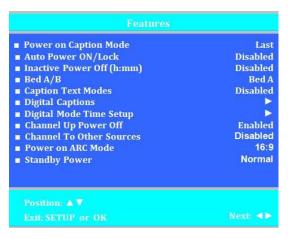

Channels					
■ Signal ■ Auto Program ■ Add/Delete Channels ■ Clear Service Level ■ Copy Service Level ■ Parental Control ■ Power on Channel ■ Channel Lock ■ Channel Memory Override	Cable STD Cable STD Disabled Enabled MTI Port				
Position: ▲ ▼ Exit: SETUP	Next: ◀▶				

Sources			
TV Composite Video S- Video Component HDMI 1 HDMI 2 PC-ANALOG FM Radio DVD Power On Source	Enabled/APO Enabled/APO Enabled/APO Enabled/APO Disabled Disabled Disabled Disabled Tisabled Disabled Tisabled Tisabled Tisabled		
Position: ▲ ▼ Exit: SETUP	Next: ◀▶		









Document Number: PD196-426R2

User Manual

Page 13 of 27

TV Setup - A-Series

To establish communication to interface module the CCI port on the TV must be active and you must have a PDi programming remote PD108-420 (not included).

- From the TV, open the TV Setup Menu by pressing SETUP on the programming remote.
- Select "Sources" and then select "Source Enable". Set each item as detailed below.

The TV Source Setup must properly reflect the actual connections to the TV. Incorrect settings will result in loss of programming or the addition of blank signal sources. In most installations, both cable/satellite and off-air programming is delivered over RF so the "TV" must be enabled. If the cable/satellite channels are delivered over an alternate method such as HDMI, then that source must be enabled. All unused sources should be disabled.

MODEL:



TV Setup - medTAB

medTAB14C, medTAB19C, and medTAB16C are compatible with PDi interface modules. To establish communication to interface module the CCI port on the TV must be active. Setup on the medTAB14C and medTAB16C can be completed with a PDi programming remote PD108-420 (not included). medTAB19C setup is completed through onscreen touchscreen controls.

- From the TV app, open the TV Settings Menu, by pressing SETUP on the programming remote or by pressing Settings on the touchscreen TV controls. Enter password ("45066" is factory default).
- Select "Advanced Option".
- Select "Features" then select "Input Sources". Set each item as detailed below.

The TV Source Setup must properly reflect the actual connections to the TV. Incorrect settings will result in loss of programming or the addition of blank signal sources. In most installations, both cable/satellite and off-air programming is delivered over RF so the "TV" must be enabled. If the cable/satellite channels are delivered over an alternate method such as HDMI, then that source must be enabled. All unused sources should be disabled.

Verifying and Troubleshooting Connections

The following steps verify the data connections between the STB and TV. These instructions assume you have followed the previous connection and TV setup sections of this manual.

- Power the TV. 1.
- Power the set-top-box.
- Power the interface module. Note-If using a DirectTV box, power is through the USB cable.
- Examine the front mounted status lights on the PD295-004 interface module. It contains a POWER, STB (settop-box), TV COM, LINK, and HDMI status lights.
 - Each light will turn green (yellow for power) when properly connected.
 - A dark (Off) status light indicates a problem.
 - A blinking STB LINK LED indicates data transfer. HDMI blinking means HDMI video content is not copy protected.
 - All 5 lights lit indicate all connections are working properly and HDMI is being sent to the TV.

Please review the "Troubleshooting" section for additional help.

NOTE: While the LINK light indicates a working connection to the TV, it does not confirm the audio/video (RF or HDMI) from the STB is connected to the correct TV.











Document Number: PD196-426R2

User Manual

Page 14 of 27

Power

On – Yellow Solid – Indicates that the minimod processor has power and is running properly.

Off - No power supplied to the minimod, either through the USB or power connector.

MODEL:

STB Link

Note: If a DirecTV box is not used or is used but not connected with the USB cable, this LED will not be active. The minimod box can be powered with a separate wall wart and the IR output used to control the set-top-box.

On – Green – Indicates communication between the minimod and the DirecTV set-top-box. It may take up to 2 minutes after power is cycled before the light will turn on.

Off – No set-top-box communication. Check USB cable connection. Cycle power to set-top-box.

TV COM

On – Green – Indicates communication to the remote TV. This may blink occasionally indicating TV communication.

Off – No TV communication. If this light is off and the TV LINK light is on solid, there is a CCI cable connection problem inside the TV.

LINK

On - Green - Solid - Indicates an active connection to the remote TV. This indicator is different in functionality than the TV COMM led. This indicates the CAT6 cable connection is good between the minimod and the TV, but not necessarily communication to the TV board. See the TV COMM description above.

Off - No CAT6 connection to the TV. If this light is off and the POWER light is on solid, there is a CAT6 cable connection problem between the minimod and the TV.

HDMI

On - Green - Blinking - Indicates an active HDMI video stream connection to the TV. This indicator is different in functionality than the TV COMM led. This indicates the CAT6 cable connection is good between the minimod and the TV, but not necessarily communication to the TV board. See the TV COMM description above.

Off - If this light is off and the TV LINK light is on, check the HDMI input connection. If both TV LINK and TV HDMI lights are off, there is no CAT6 connection to the TV. If this light is off and the POWER light is on solid, there is a CAT6 cable connection problem between the minimod and the TV. The HDMI input can be working and this light be off it the HDMI signal is not being received by the TV.

POWER	STB	TV	LINK	HDMI	SUGGESTIONS
	LINK	COM			
OFF	OFF	OFF	OFF	OFF	1. Verify interface module is powered (USB or Power adapter)
ON	ON	ON	ON	ON	1. All connections are proper – HDMI may be solid green or blinking.
ON	ON	OFF	OFF	OFF	1. No CAT6a connection to TV
					2. No power on TV.
ON	ON	OFF	ON	ON	1. CCI connection issue inside TV
					2.
ON	ON	ON	ON	OFF	1. No HDMI input from set-top-box. 2. No HDMI connection inside of TV. 3. 4.
ON	OFF	ON	ON	ON	1. Press RESET button on set-top-box. Wait 2 minutes for STB to reboot.
ON					
ON					









Document Number: PD196-426R2

Her Manual

Page 15 of 27

Interface Module Setup Menus

The interface module is configurable from Setup menus accessed by the TV programming remote or onscreen touchscreen controls. The following instructions assume you have connected the TV, interface module, STB, and the various components according to the previous instructions contained in this manual.

Accessing Interface Module Setup Menus on most PDi TVs

MODEL:

Make certain the STB and interface module are powered. See the instructions that came with the STB for more details.



NOTE: Some set-top-boxes (STBs) require several minutes following application of initial power to effectively respond to commands. Please allow enough time for the STB to properly initialize.

- Stand in front of the TV and press the SETUP button on the PD108-420 programming remote
- When the TV Setup menu appears on the TV's screen, press SETUP a second time to display the interface module setup menu.
- Press the "CH♠" or "CH♥" on the remote to highlight the desired option. To advance to the next page, press "CH♥" when the bottom item on the list is highlighted.
- Press "VOL►" or "VOL¬" on the remote to cycle through a menu item's setting options.
- When finished, press SETUP to exit the "interface module setup" menu and save changes.

Accessing Interface Module Setup Menus on medTAB-C

Make certain the STB and interface module are powered. See the instructions that came with the STB for more details.



NOTE: Some set-top-boxes (STBs) require several minutes following application of initial power to effectively respond to commands. Please allow enough time for the STB to properly initialize.

- From the TV app, open the TV Settings Menu, by pressing SETUP on the programming remote or by pressing Settings on the touchscreen TV controls. Enter password ("45066" is the factory default).
- Select Advanced Option then press SETUP on the programming remote OR tap anywhere on the screen to open the STB interface module setup menu.
- Press the "CH▲" or "CH▼" on the programming remote OR use the touchscreen navigation arrows ▲ ▼ to highlight the desired option. To advance to the next page, press "CH▼" or ▼ when the bottom item on the list is highlighted.
- Press "VOL►" or "VOL¬" on the programming remote OR use the touchscreen navigation arrows ► ¬to cycle through a menu item's setting options.
- When finished, press SETUP on the programming remote OR press Settings on the touchscreen controls to exit the "interface module setup" menu and save changes. NOTE: FAILURE TO EXIT the interface module setup menu by following this step 6 could result in patient access to interface module setup menus.









PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 16 of 27

Menus 1 ~ 5

Menus 1, 2, 3, 4 and 5 provide the mapping content of a control device's keypad buttons. The factory default settings are shown in the menus pictured here in this manual. A complete listing of STB functions is provided in appendix A.

The left menu column "- TV KEY -" contains a listing of common control buttons found on pillow speakers, remotes, and television keypads.

The right menu column "- STB COMMAND-" contains default settings that work well with most STB's. Adjustment can only be made to items in the right column.



NOTE: A STB menu item that is blank does not provide any STB control functionality and will operate the standard TV function.

INTERFACE MODULE SETUP		
STB Model	DirecTV	
Settings	>	
TV Keys	>	
Numeric Keys	>	
Navigation Keys	>	
Media Play Keys	>	
Misc Keys	>	

Save: SETUP/OK Cancel: POWER

INTERFACE M	ODULE SETUP	
-TV KEY-	-STB COMMAND-	
CH Up	CH+	
CH Dn	CH-	
Vol Up		
Vol Dn		
Last/Prev Ch	Prev Channel	
OK / Sel / Enter	Select	
CC		
ARC/Ratio	Down Arrow	
Mute		
Sleep	Up Arrow	
SAP/MTS		
Return: SETUP/OK/LAST		

INTERFACE MODULE SETUP				
-TV KEY-	-STB COMMAND -			
0	Digit 0			
1	Digit 1			
2	Digit 2			
3	Digit 3			
4	Digit 4			
5	Digit 5			
6	Digit 6			
7	Digit 7			
8	Digit 8			
9	Digit 9			
Dash (-)	Info			
Return: SETUP/OK	/LAST			

INTERFACE MODULE SETUP		
-TV KEY-	-STB COMMAND -	
Up Arrow	Up Arrow	
Dn Arrow	Down Arrow	
Lt Arrow	Left Arrow	
Rt Arrow	Right Arrow	
Menu	Guide	
Home		
Guide	Guide	
Info	Info	
Recall/Star (*)	Prev Channel	
Exit:	Exit	
Back (Nav)	Back	
Return: SETUP/OK/LAST		

INTERFACE MODULE SETUP				
-TV KEY-	-STB COMMAND -			
Play	Play			
Pause	Pause			
Stop	Stop			
Eject	Record			
Rewind	Rewind			
Fast Forward	FFWD			
Last Track	Replay			
Next Track	Advance			

Return: SETUP/OK/LAST

INTERFACE MODULE SETUP -TV KEY--STB COMMAND -TV/FM Exit TV/AV/Input Ch List Guide **DVD Menu** Guide RED **GREEN** YELLOW BLUE

Return: SETUP/OK/LAST









Document Number: PD196-426R2

User Manual

Page 17 of 27

Menu 6

Menu 6 provides STB configuration settings and firmware information.

MODEL:

MENU ITEM	EXPLANATION
TV Input for STB	Sets the TV's signal type input to correspond to the STB's signal output. The majority of STB's utilize modulated RF as the signal type and is the type shown in this instruction manual. TUNER is the default setting. Additional settings are available for STB's with different output signal types.
TV Chan for STB	When the STB Signal Input is set to "Tuner", this sets the channel the TV tunes to view the STB's signal. This setting should match the STB's "CH" switch setting (which is usually 3 or 4) or the modulator channel number.
STB Model	Model number of set-top-box. Must match actual unit for proper operation. NOTE: Changing the STB Model does not change the previous STB Key selections. If the STB Model is
	changed, the STB Key selections should be reviewed to determine if they are the desired mappings for the installation.
Restore Defaults for STB	Press vol► to restore all interface settings, for the selected STB model, to factory defaults.
	NOTE: Each STB model has a unique set of Factory Defaults. Selecting "Restore Factory Defaults" changes the parameters to the Factory Defaults for the selected STB model and does not change the "STB Model" selection.
	The default settings for each supported STB are detailed below in "Appendix B – STB Functions and Default Mapping Reference"
Flash Intface Pwr LED	This provides a diagnostic tool to help determine if the TV is connected to the expected Satellite Interface and STB. If "Flash Intface Pwr LED" is turned on, the "POWER" LED on the Satellite Interface module controlled by this TV will flash rapidly. The STB controlled by this interface will also turn on and off continuously.
	NOTE: This is not a stored parameter. It is automatically set to "OFF" by cycling power to the interface module.
Power Save	If "Power Save" is turned ON, the STB will be automatically powered off when the TV is turned off
Interface F/W Ver	PDi set-top-box Interface firmware version
TV CCI Ver	CCI communication protocol version reported by TV
IR Cable	Connection status of IR Emitter cable to the interface module.

INTERFACE MODULE SETUP

TV Input For STB Tuner **Restore Defaults for STB** Flash Intface Pwr LED Off **Power Save**

DIAGNOSTICS V5.00 IR Interface F/W Ver TV CCI Ver V5.2 **IR Cable** Connected

Return: SETUP/OK/LAST

Programming the Interface Module

Programming the IR Code Set

The Interface Module sends infrared (IR) codes that mimic the set-top-box's remote control. Therefore the interface must know which set-top-box is being controlled to send the proper codes.

- 1. Enter the Interface Module Setup Menu (See "Understanding Interface Module Setup Menus" earlier in this manual).
- 2. Select menu Interface Module SETUP 6/6".
- Set "STB Model" to match the actual model of the STB.
- Perform a factory reset (See Restoring Factory Default Settings later in this manual).

PDi Communication Systems, Inc. • 40 Greenwood Ln • Springboro, Ohio 45066 USA • www.PDiarm.com and www.mymedTV.com • Phone 800.628.9870











PDi BELLA-HD Interface

Document Number: PD196-426R2


User Manual

Page 18 of 27

Provider	Set Top Box Model	On Screen "STB Model" Setting	
Cablevision	Scientific Atlanta Explorer 4250HD	SciAtl/Cisco	
Charter/Spectrum	Motorola DCH6200	Moto/Arris	
Charter/Spectrum	Motorola DCT2224	Moto/Arris	
Comcast/Xfiniti	Pace DC50X	Cmcst X1	
Comcast/Xfiniti	Pace PXD01ANI	Cmcst X1	
Comcast/Xfiniti	Comcast PR150B	Cmcst Legacy	
Comcast/Xfiniti	Comcast RNG110	Cmcst Legacy	
cox	COX 3250HD (Scientific Atlanta Explorer 3250HD)	SciAtl/Cisco	
COX	COX DTA250HD	Cox DTA250HD	
Dish	Dish ViP211k	Dish	
Dish	Dish ViP222k	Dish	
Haivision	Haivision Stingray	Hai Stingray	
Haivision	Haivision Mantaray	Hai Mantaray	
Time Warner Cable/Spectrum	Cisco DTA 271HD	SciAtl/Cisco	
Time Warner Cable/Spectrum	Cisco 8742 HDC	SciAtl/Cisco	
Time Warner Cable/Spectrum	Spectrum101-T	SciAtl/Cisco	
Verizon		Moto/Arris	

Keypad Programming (Mapping) Instructions

The set-top-box (STB) can be controlled remotely by any of the following that incorporate a keypad: Pillow Speaker, TV's Keypad (Arm Mounted TV's), or Handheld Remote Control. In other words, any control device that incorporates a keypad capable of controlling the TV can also control the set-top-box.

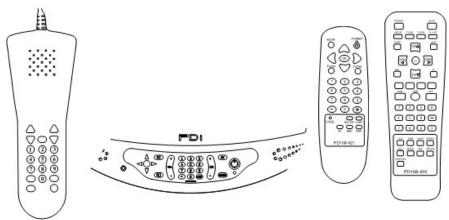

Keypad Programming or Mapping involves assigning key functions to the corresponding set-top-box (STB) functions. It is common practice to designate a control button to activate the STB's Channel "Guide" feature. This feature allows for quicker selection of satellite channels. Some common control buttons used for "Guide" are listed below. Your installation may vary depending upon the control device's availability of these particular buttons.

Control Button	STB Function			
Menu	Guide			
(-)	Guide			

- 1. Enter the Interface Module Setup Menu (See "Understanding Interface Module Setup Menus" earlier in this manual).
- Select menu pages 1 through 5.
- For each "TV Key" on the left column, set the matching "STB COMMAND" on the right column to the desired STB function.









Document Number: PD196-426R2

Her Manual

Page 19 of 27

Programming for Off-Air Non-Satellite Channels Using Off-Air RF Pass-Thru

MODEL:

The set-top-box (STB) can be remotely turned off, which allows any signal connected to the "OFF-AIR" input of the STB to be active and then viewed downstream by the TV. The Off-Air signal could be a DVD player for an in-house movie channel, an externally connected antenna for local over-the-air channels, or cable TV channels. See pages 7 or 8 for details regarding connection of an Off-Air signal.



NOTE: Off-Air signals are optional and may not be available at the facility. Some set-top-boxes do not have off air pass through. In either case this instruction section may be skipped.

To view an Off-Air signal, the patient must turn Off the STB. A control key must be assigned to perform this function. The control key should NOT be the TV's POWER button as it is used to power the TV On and Off. Instead, another key must be selected. Below are some suggestions for STB "Power" keys that might be utilized on some common control devices.


CONTROL DEVICE	SUGGESTED CONTROL KEY
Pillow Speaker	ALT, MENU, TV/AV
TV Keypad	MENU, OK, AV
Remote	TV/AV, (-)

An Example for Off-Air RF Pass-Thru

A facility has an outside antenna that contains several local TV channels that they wish to provide to their patients for viewing in addition to Satellite TV channels.

The facility is equipped with the PDI-P15X arm mounted television powered remotely from a central style power supply. The Off-Air antenna signal is connected to the input of the central power supply and the STB is connected using the Optional Secondary RF Coax cable as shown on pages 8 and 9.

For this configuration, the yellow (Menu) button on the TV's keypad is chosen to Power the STB on and off by changing the mapping of the TV "Menu" key to "Power".

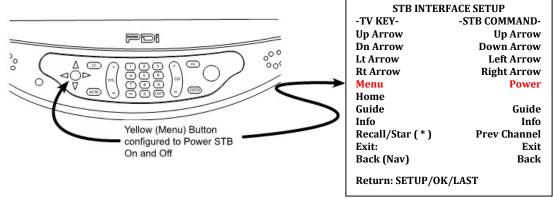

Now, Exit the Interface Module SETUP menu by pressing the SETUP button on the programming remote.

Pressing the "MENU" button on the TV's keypad should power the STB on and off with each key press. The only remaining setup involves programming the TV for the Off-Air channels while the STB is off. The TV's channel programming is not required to include the STB's channel as well. For example, if the STB is set for channel 3 output, the same channel could be omitted from the TV's channel table, if no local channel 3 is available. Please see the programming instructions specific to the model PDi TV being used.



Document Number: PD196-426R2

User Manual

Page 20 of 27


Programming the STB Signal Input Type

The Interface Module must be programmed so that it knows which TV source input needs the keys to be mapped to the STB. When any other signal source is selected, all keys will operate normally.

1. Enter the Interface Module Setup Menu (see "Understanding Interface Module Setup Menus" earlier in this manual)

MODEL:

- 2. Select menu "Interface Module SETUP 6/6".
- 3. Set "STB Signal Input" to match the connection to the STB. This is usually Tuner but may be "HDMI" or "Component" for high-definition STB's.
- 4. If "STB Signal Input" is "Tuner" then set the "STB Channel" to match the STB's modulated RF output. The illustration depicts the channel as number 3 in this example.
- 5. Exit setup. Verify the STB signal is now displayed on the television.

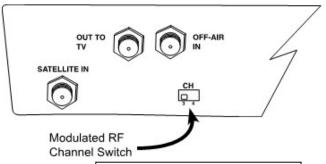

INTERFACE MODULE SETUP				
TV Input For STB	Tuner			
TV Chan For STB	003			
STB Model	DC50X			
Restore Defaults for STB	>			
Flash Intface Pwr LED	Off			
Power Save	On			
DIAGNOSTIC	CS .			
IR Interface F/W Ver	V5.00			
TV CCI Ver	V4.6			
IR Cable	Connected			

Restoring Factory Default Settings

The Interface Module configuration can be reset to factory defaults. Resetting to defaults cannot be undone. If the Interface is connected to a PDI-P19W the default configuration will be optimized for the P19W's keypad. It will not match the settings that came preloaded onto the Interface.

- 1. Enter the Interface Module Setup Menu (See "Understanding Interface Module Setup Menus" earlier in this manual).
- Select menu "Interface Module SETUP 6/6".
- 3. Highlight the "Restore Factory Defaults" item.
- 4. Press "VOL►" to restore factory defaults. The operation will happen immediately and cannot be undone.

INTERFACE MODULE SETUP 6/6						
TV Input For STB	Tuner					
TV Chan For STB	003					
STB Model	DC50X					
Restore Defaults for STB	>					
Flash Interface Pwr LED	Off					
Power Save	On					
DIAGNOSTICS						
IR Interface F/W Ver	V5.00					
TV CCI Ver	V4.6					
IR Cable	Connected					
Return: SETUP/OK/LAST						

Operation

PDi Interface Module operation is straight forward once configured. Site installations that involve a secondary "Off Air" signal require additional instruction to provide a worry-free patient viewing experience.

Cable/Satellite TV Operation

- Turn the TV on. A channel from the set-top-box should be displayed.
- Channel the TV Up or Down. The set-top-box channel should follow.
- Press the designated Guide button or press "00". A channel guide should appear.
- Select a channel from the Guide. The viewed set-top-box channel should follow the selection.









Document Number: PD196-426R2

User Manual

Page 21 of 27

Off-Air TV Operation (Optional)

- 1. a. If using the TV Tuner for cable/satellite programming, press the control button designated for STB Power (see section "Programming for Off-Air Non-Satellite Channels Using OFF-AIR RF Pass-Thru").
 - b. If using an input other than RF Tuner for cable/satellite programming, press the TV/AV key repeatedly until the TV Tuner source is selected.
- 2. The STB signal should disappear.
- 3. Channel the TV Up or Down. The TV should now tune the Off-Air channels (non-STB channels).
- 4. a. If using the TV Tuner for cable/satellite programming, press the control button designated for STB Power again. b. If using an input other than RF Tuner for cable/satellite programming, press the TV/AV key again until the cable/satellite box source is selected.
- 5. The Off-Air channel should disappear and be replaced with a cable/satellite channel.
- 6. Press the TV's power button to turn off the TV at any time.

MODEL:

Troubleshooting

Scan QR code:



Symptom	Resolution
The set top box is being controlled by IR interference from other remotes or IR emitters	Depending on the location of the set top box, the set top box may experience interference from fluorescent lights, IR remotes or from other IR emitters on set top boxes in the same area.
	The IR emitter supplied with the PD295-004 allows the pass through of other external IR signals through its outward facing side. This IR emitter also sends the IR signal out the side opposite the cable entry, besides sending the signal through the side mounted to the set top box.
	Fluorescent lights emit IR noise that reduces the sensitivity of the set top box IR receiver.
	If there is a possibility that the IR emitter can be exposed to unwanted IR signals in the area, it is recommended that the IR emitter be covered with tape that blocks IR.
Set top box and TV are out of sync Set top box is ON when the TV is OFF	It is possible that the TV power state and the set top box power state get out of synchronization; the set top box is off when the TV is on. To correct this problem, turn both the TV OFF and set top box OFF.
or	both the TV Orr and Set top box Orr.
set top box is OFF when the TV is ON	If the problem persists, the IR emitter cable may not be aimed well enough for the set top box to receive the proper signal. Try moving the IR emitter and then covering it with black tape as suggested above.
TV turns on but does not control the set top box. There may be only a black	There can be many causes including a locked up set top box, miswiring, or incorrect configuration settings.
screen or a fixed satellite channel that	1. Reset the set top box using one of two ways.
cannot be changed.	a. Push the reset button on the set top box.
	b. Remove power from the set top box for 30 seconds.
	2. Check the wiring. The signal loop must be correct and complete. The CCI cable from the TV must connect to the Interface Module which is in turn connected by










MODEL:

Document Number: PD196-426R2

Her Manual

Page 22 of 27

IR emitter to the STB that is sending audio/video and optionally power to the

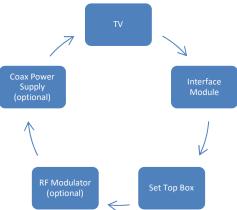

- Visually verify as many connection points as possible. Sometimes this is not easy, so proceed to the next step.
- Verify all 3 LEDs are lit for the Interface Module that is supposed to be connected to this TV. See "Verifying and Troubleshooting Connections". If they are lit there is certainly a connection to a TV and set top box, but possibly not to the correct devices.
- Turn on "Flash Intface Pwr LED" to identify the Interface Module connected to this TV as well as the STB which is being controlled by this TV. See section "Interface Module Setup Menus". Verify the correct Interface Module has a blinking POWER LED and that the expected STB is slowly turning on and off.
- Check the Interface Module configuration.
 - Verify the Interface Module "STB Model" parameter is set properly. See "Programming the IR Code Set", page 18.
 - b. Verify the Interface Module "TV Input for STB" parameter is set to the source input (such as TUNER, HDMI 1, etc.) that matches the set top box's connection to the TV. See "Programming the STB Signal Input Type", page 20.
 - c. If the video input to the TV is RF/TUNER, verify the Interface Module "TV Chan for STB" parameter is set to the channel that matches the set top box's RF modulator. See "Programming the STB Signal Input Type", page 20.

Additional steps for Dish receivers:

Dish receivers must be set to Primary Remote Address #1 for proper operation.

Verify the remote address setting by pressing "System Info" on the Dish receiver's front panel. The system Information screen displays on the TV showing the Primary Remote Address. If the value is not 1, then follow these steps to reset it.

- Turn off all other nearby Dish receivers. 1.
- Aim the Dish IR remote at the powered on receiver.
- 3. Press and hold SAT on the Dish IR remote control, for about three seconds, until all mode buttons light up. Release SAT.
- Use the NUMBER PAD on the Dish remote to enter the number 1.
- Press POUND(#). If the address was entered correctly, SAT will flash three
- Press RECORD on the Dish remote. The TV screen should update. Make sure the Primary Remote Address shown on the System Information screen is now '1'.
- Press SELECT to remove the System Information screen.











MODEL: PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 23 of 27

Appendix A - Control Device (TV) Key Reference

A listing of Control Device Keys is provided below. Each control device key can be programmed to send a supported command to a connected set-top-box. Please refer to sections "TV Setup" and "Understanding Interface Module Setup Menus" for programming details. NOTE: A "Control Device Key" (also referenced as a 'TV Key') is a key located on the front panel of a PDi TV and/or on a PDi TV compatible controller (IR remote control, pillow speaker, or wireless control device).

Control Device K	ev
Ch Up	
Ch Down	
Vol Up	
Vol Down	
Menu	
Last/Prev Ch	
OK/Sel/Enter	
CC	
ARC/Ratio	
Mute	
Sleep	
0	
1	
2	
3	
4	
5	
6	
7	
8	
9	
Play	
Pause	
Stop	
Eject	
Rewind Fast Forward	
Last Track	
Next Track	
Up Arrow	
Down Arrow	
Left Arrow	
Right Arrow	
Dash (-)	
TV/FM TV/AV/Input	
SAP/MTS Ch List	
Ch List	
Guide	
Info	
Recall/Star (*)	
Exit	
Back (Nav)	
Home	
DVD Menu	
RED	
GREEN	
YELLOW	
BLUE	









Document Number: PD196-426R2

User Manual

Page 24 of 27

Appendix B - STB Command Reference

A listing of all STB commands for each of the compatible set top box is provided below.

MODEL:

Refer to section "Understanding Interface Module Setup Menus" for programming details to change the "STB Model" selection and to change the "STB Command" that a "Control Device Key" controls.

NOTE: The set top box may not support all the functions shown.

Available STB Commands

Cmcst X1	Cmcst	SciAtl/	Dish	Moto/Arris	Hai Stingray	Hai Mantaray	Cox
	Legacy	Cisco					DTA250HD
Digit 0	Digit 0	Digit 0	Digit 0	Digit 0	Digit 0	Digit 0	Digit 0
Digit 1	Digit 1	Digit 1	Digit 1	Digit 1	Digit 1	Digit 1	Digit 1
Digit 2	Digit 2	Digit 2	Digit 2	Digit 2	Digit 2	Digit 2	Digit 2
Digit 3	Digit 3	Digit 3	Digit 3	Digit 3	Digit 3	Digit 3	Digit 3
Digit 4	Digit 4	Digit 4	Digit 4	Digit 4	Digit 4	Digit 4	Digit 4
Digit 5	Digit 5	Digit 5	Digit 5	Digit 5	Digit 5	Digit 5	Digit 5
Digit 6	Digit 6	Digit 6	Digit 6	Digit 6	Digit 6	Digit 6	Digit 6
Digit 7	Digit 7	Digit 7	Digit 7	Digit 7	Digit 7	Digit 7	Digit 7
Digit 8	Digit 8	Digit 8	Digit 8	Digit 8	Digit 8	Digit 8	Digit 8
Digit 9	Digit 9	Digit 9	Digit 9	Digit 9	Digit 9	Digit 9	Digit 9
Power	Power	Power	Power	Power	Power	Power	Power
Info	Info	Info	Info	Info	Info	Info	Info
CH+	CH+	CH Up	CH Up	CH Up	CH+	CH+	CH+
CH-	CH-	CH Down	CH Down	CH Down	CH-	CH-	CH-
OK /Select	OK /Select	Select	Select	Select	OK	OK	Select
Last	Last	Last	Recall	Last	Enter/Flback	Prev Chan	Last
FAV	FAV	FAV	(*)	FAV	Help	CC	CC
Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow
Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow
Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow
Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down
							Arrow
HD Zoom	HD Zoom	ENTER	(#)	(#)	Sleep	Mute	Mute
Exit	Exit	EXIT	Cancel	EXIT	Cancel/Clear	Clear	Exit
Guide	Guide	Guide	Guide	Guide	Guide	Guide	Guide
Menu	Menu	Menu	Menu	Menu	Menu	Settings	Menu
Search	Search	DVR LIST	Search	LIST	Search	VOD	Zoom
Red (C)	Red (C)	Red (C)	Red	Red (C)	Red/Mute	Red	VOL+
Help	Help	Green (D)	Green	Green (D)	Green/CC	Green	VOL-
Yellow (A)	Yellow (A)	Yellow (A)	Yellow	Yellow (A)	Yellow	Yellow	
Blue (B)	Blue (B)	Blue (B)	Blue	Blue (B)	Blue	Blue	
Pause	Pause	Pause	Pause	Pause	Pause	Pause	
Rewind	Rewind	Rewind	Back	Rewind	Rewind	Rewind	
Play	Play	Play	Play	Play	Play	Keyboard	
Stop	Stop	Stop	Stop	Stop	Jump Back	Stop	
REC	REC	REC	Record	REC	Jump to End	Audio	
Replay	Replay	Replay	Skip Back	Replay	Skip Back	Skip Back	
		Fast					
Fast Forward	Fast Forward	Forward	Fast Forward	Fast Forward	Fast Forward	Fast Forward	
ON DEMAND	ON DEMAND	ON DEMAND	ON DEMAND	ON DEMAND	Skip Fwd	Skip Fwd	









PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 25 of 27

Cmcst X1	Cmcst	SciAtl/	Dish	Moto/Arris	Hai Stingray	Hai Mantaray	Cox
	Legacy	Cisco					DTA250HD
Page Up	Page Up	PAGE +	Page Up	PAGE +	VOL+	VOL+	
Page Down	Page Down	PAGE -	Page Down	PAGE -	VOL-	VOL-	
PIP (On-Off)	PIP (On-Off)	PIP (ON OFF)	PIP	PIP (ON OFF)	PIP	Video	
PIP (Swap)	PIP (Swap)	PIP (SWAP)	PIP Swap	PIP (SWAP)	PIP Swap	Unmarked 1	
PIP (Move)	PIP (Move)	PIP (MOVE)	Position	PIP (MOVE)	Hide	Unmarked 2	
PIP (CH +)	PIP (CH +)	PIP (CH +)	Skip FWD	PIP (CH +)	Bookmark	Hotmark	
PIP (CH -)	PIP (CH -)	PIP (CH -)	dish	PIP (CH -)	V1 (Favorite)	Unmarked 3	
LIVE	LIVE	LIVE	LIVE	LIVE	V2 (Favorite)		
TV/VCR/	TV/VCR/	INPUT	INPUT	VIDEO	V3 (Favorite)		
Input	Input			SOURCE			
Language	Language	HD ZOOM		(*)			
(D)	(D)						
My DVR	My DVR	SETTINGS		SETTINGS			
		CC		DAY +			
		USER		DAY -			

Appendix C - Factory Defaults

	Default STB Command							
Control Device Key	Cmcst X1	Cmcst Legacy	SciAtl/ Cisco	Dish	Moto/Arris	Hai Stingray	Hai Mantaray	Cox DTA250 HD
Ch Up	CH+	CH+	CH Up	CH Up	CH Up	CH+	CH+	CH+
Ch Dn	CH-	CH-	CH Down	CH Down	CH Down	CH-	CH-	CH-
Vol Up								
Vol Down								
Menu	Guide	Guide	Guide	Guide	Guide	Guide	Guide	Guide
Last/Prev Ch	Last	Last	Last	Recall	Last	Enter/ Flback	Prev Chan	Last
OK/Select/ Enter	OK/Select	OK/Select	Select	Select	Select	OK	OK	Select
CC						Green/CC	CC	CC
ARC/Ratio	Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down Arrow	Down Arrow
Mute								
Sleep	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Sleep	Up Arrow	Up Arrow
0	Digit 0	Digit 0	Digit 0	Digit 0	Digit 0	Digit 0	Digit 0	Digit 0
1	Digit 1	Digit 1	Digit 1	Digit 1	Digit 1	Digit 1	Digit 1	Digit 1
2	Digit 2	Digit 2	Digit 2	Digit 2	Digit 2	Digit 2	Digit 2	Digit 2
3	Digit 3	Digit 3	Digit 3	Digit 3	Digit 3	Digit 3	Digit 3	Digit 3
4	Digit 4	Digit 4	Digit 4	Digit 4	Digit 4	Digit 4	Digit 4	Digit 4
5	Digit 5	Digit 5	Digit 5	Digit 5	Digit 5	Digit 5	Digit 5	Digit 5
6	Digit 6	Digit 6	Digit 6	Digit 6	Digit 6	Digit 6	Digit 6	Digit 6
7	Digit 7	Digit 7	Digit 7	Digit 7	Digit 7	Digit 7	Digit 7	Digit 7
8	Digit 8	Digit 8	Digit 8	Digit 8	Digit 8	Digit 8	Digit 8	Digit 8
9	Digit 9	Digit 9	Digit 9	Digit 9	Digit 9	Digit 9	Digit 9	Digit 9
Play	Play	Play	Play	Play	Play	Play		
Pause	Pause	Pause	Pause	Pause	Pause	Pause	Pause	
Stop	Stop	Stop	Stop	Stop	Stop		Stop	
Eject	REC	REC	REC	Record	REC			
Rewind	Rewind	Rewind	Rewind	Back	Rewind	Rewind	Rewind	









MODEL: PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 26 of 27

				Default ST	STB Command							
Control Device Key	Cmcst X1	Cmcst Legacy	SciAtl/ Cisco	Dish	Moto/Arris	Hai Stingray	Hai Mantaray	Cox DTA250 HD				
Fast Forward	Fast	Fast	Fast	Fast	Fast	Fast	Fast					
	Forward	Forward	Forward	Forward	Forward	Forward	Forward					
Last Track	Replay	Replay	Replay	Skip Back	Replay	Skip Back	Skip Back					
Next Track			ON DEMAND	ON DEMAND	ON DEMAND	Skip Fwd	Skip Fwd					
Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow	Up Arrow				
Down Arrow	Down	Down	Down	Down	Down	Down	Down	Down				
	Arrow	Arrow	Arrow	Arrow	Arrow	Arrow	Arrow	Arrow				
Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow	Left Arrow				
Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow	Right Arrow				
Dash (-)							Info	Info				
TV/FM	Exit	Exit	Exit	Cancel	Exit	Cancel/ Clear	Clear	Exit				
TV/AV/Input												
SAP/MTS	Language (D)	Language (D)					Audio					
Ch List	Guide	Guide	Guide	Guide	Guide	Guide	Guide	Guide				
Guide	Guide	Guide	Guide	Guide	Guide	Guide	Guide	Guide				
Info	Info	Info	Info	Info	Info	Info	Info	Info				
Recall/Star (*)	Last	Last	Last	Recall	Last	Enter/ Flback	Prev Chan	Last				
Exit	Exit	Exit	Exit	Cancel	Exit	Cancel/ Clear	Cancel/ Clear	Exit				
Back (Nav)						Jump Back	Prev Chan	Last				

	Default STB Command							
Control Device Key	Cmcst X1	Cmcst Legacy	SciAtl/ Cisco	Dish	Moto/Arris	Hai Stingray	Hai Mantaray	Cox DTA250 HD
Home								
DVD Menu	Menu	Menu	Guide	Guide	Guide	Menu	Settings	Menu
RED	Red (C)	Red (C)	Red (C)	Red	Red (C)	Red/Mute	Red	
GREEN	Help	Help	Green (D)	Green	Green (D)	Green/CC	Green	
YELLOW	Yellow (A)	Yellow (A)	Yellow (A)	Yellow	Yellow (A)	Yellow	Yellow	
BLUE	Blue (B)	Blue (B)	Blue (B)	Blue	Blue (B)	Blue	Blue	

	Default Setting							
Parameter	Cmcst X1	Cmcst Legacy	SciAtl/ Cisco	Dish	Moto/Arris	Hai Stingray	Hai Mantaray	Cox DTA250 HD
TV Input for STB	Tuner	Tuner	Tuner	Tuner	Tuner	Tuner	Tuner	Tuner
TV Chan for STB	003	003	003	003	003	003	003	003
Power Save	On	On	On	On	On	On	On	On









PDi BELLA-HD Interface

Document Number: PD196-426R2

User Manual

Page 27 of 27

Limited Warranty

PDi Communication Systems Inc., ("PDi") standard warranty information is found at PDiarm.com. For information regarding authorized servicing and all other information pertaining to this warranty, please contact PDi COMMUNICATION SYSTEMS, INC. at 40 Greenwood Ln, Springboro, Ohio 45066 or phone 800-628-9870 and ask for the PDi ProServices team.





