J J	MODEL NUMBER:	Document Number:
	PD181-772	PD196-291R1
Communication Systems, Inc		
Your Source for Healthcare and Wellness Infotainment [™]	Conversion Instructions	Page 1 of 2

SCOPE:

To change a PD181-772 articulating wall mount to a 200mm VESA mount.

TOOL:

Allen key (provided with PD181-772 mount kit)

SAFETY STEPS


Always wear safety glasses/goggles to prevent injury from debris. Follow the installation/removal instructions for your existing products.

PROCEDURE:

STEP 1:


Remove the (2) bottom side screws and loosen the top (2) side screws as shown (Fig. 1) NOTE: Set aside screws for later use.

Tilt existing bracket up to unhook and remove (Fig. 2)

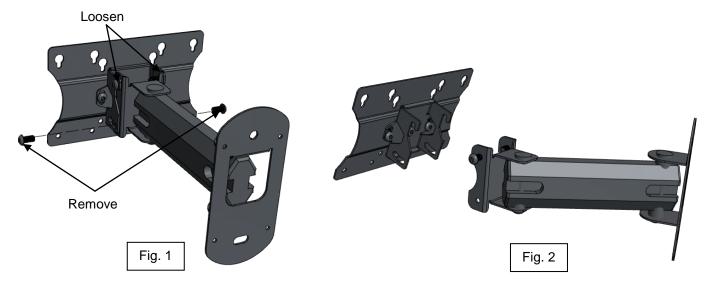

STEP 3:


Separate plate and bracket by removing (3) screws from bracket. Save screws to reuse. (Fig. 3)

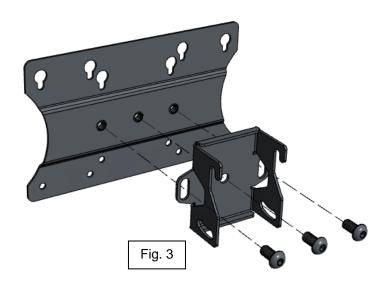



STEP 4:

Bolt new plate (PD181-776) to bracket using screws from previous step. (Fig 4) NOTE: Make sure bracket hooks and plate keyholes are both on top position

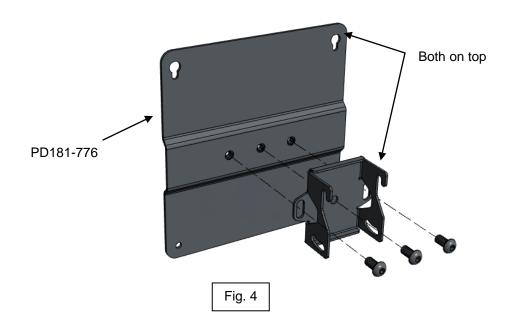

STEP 5:

Hook bracket to top (2) screws and reinsert bottom screws saved from step 1. (Fig 5) Tighten top screws.

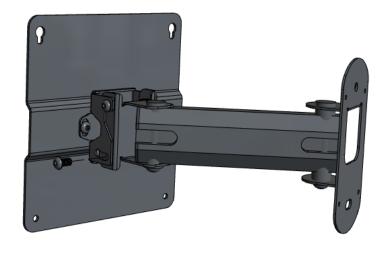


Fig. 5