

	MODEL NUMBER: Bella A-Series Module PD295-005	Document Number: PD196-429R1
	Installation Instructions	Page 1 of 2

INTRODUCTION

This document provides the information to install the Bella A-Series Module, **PD295-005**, to a PDi A-Series Large Screen Healthcare TV.


BILL OF MATERIALS

P/N	Description	QTY
PD295-005	Bella A-Series Module	1
PD106-981	26pin to RJ45 Cable, for Power & CCI	1
PD106-977	HDMI Cable	1

INSTALLATION

1. Determine a clean, flat location where you want to mount the module, **PD295-005**, on the back of the PDi TV. Note: Ensure the cables included can reach the appropriate locations on the PDi TV.
2. Using a PDi approved cleaning solution, clean the location on the PDi TV where you will mount the module, **PD295-005**, and allow the area to dry. Note: Not following this step may lead to the VHB not adhering to the back of the PDi TV. See **PDTCHB31**, Disinfecting PDi Hospital Grade Televisions Safely, for approved cleaning methods.
3. Remove the adhesive backing from the VHB on the back of the module, **PD295-005**, and attach it to the back of the PDi TV. Note: For the best performance of the VHB adhesive, orient the module, **PD295-005**, in one of the two options shown below.


PDI A SERIES TV

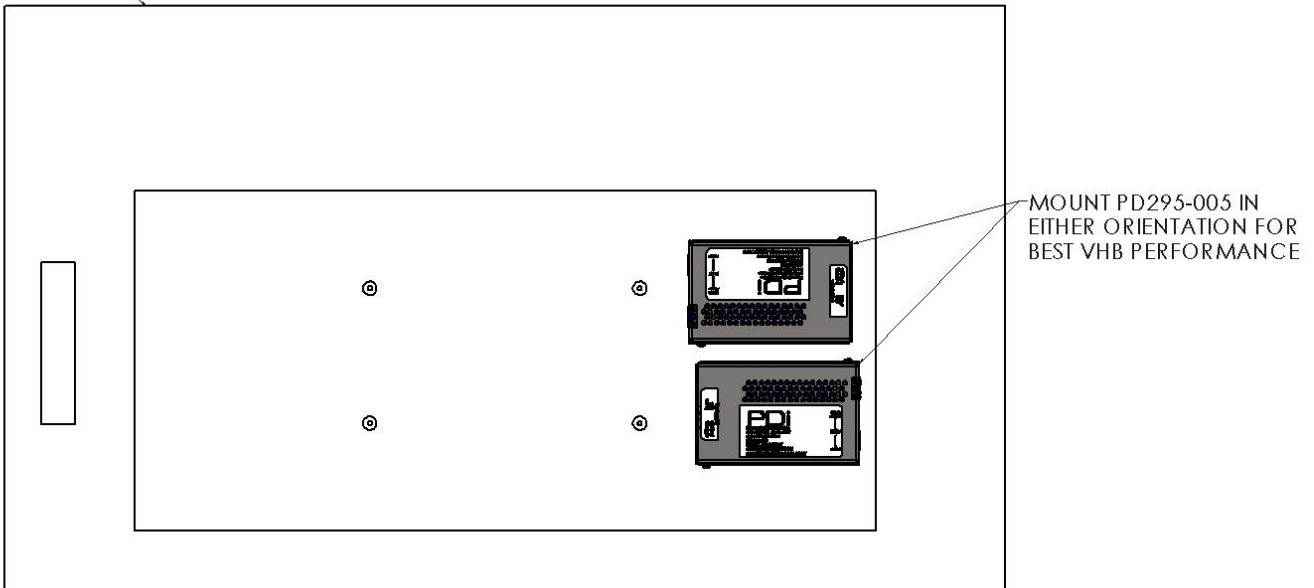

4. Connect the cables as described in the graphic below.
 - a. Note: HDMI1 is the default setting but can be changed in the Bella-HD setup menus. See installation document for the Bella-HD unit, **PD196-426**, on the PDi website for details on changing that setting. Note: if using this unit with a new A-Series TV, the TV comes with all HDMI sources disabled. See the A-Series User Manual, **PD196-389**, for how to enable the HDMI source.



	MODEL NUMBER: Bella A-Series Module PD295-005	Document Number: PD196-429R1
	Installation Instructions	Page 2 of 2

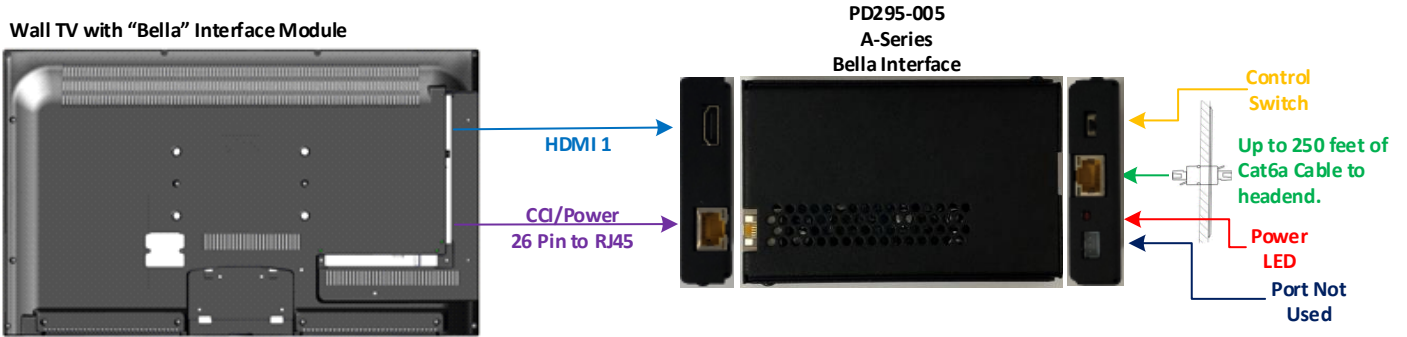

TROUBLESHOOTING

1. The red LED shown indicates that the unit is receiving power. For the unit to receive power, the unit must be connected to the A-Series TV and the TV must be powered on.
2. On the CAT connector to the TV, neither LED will light up.
3. On the CAT connector to the Bella-HD unit, the yellow light indicates there is a connection. The green light indicates an HDMI signal is being received by the unit.
4. If the unit is not changing channels, ensure that the switch is in the position closest to the RJ45 connector.

WARRANTY

PDi Communication Systems, Inc., (“PDi”) standard warranty information is found at pdiam.com. For information regarding authorized servicing and all other information pertaining to this warranty, please contact PDi COMMUNICATION SYSTEMS, INC. at 40 Greenwood Ln, Springboro, Ohio 45066, or phone 800-628-9870 and ask for the PDi ProServices team.

